HOME
DECORATORS
COLLECTION

BF-25324 FREMONT LINEN CABINET 65"Hx20"Wx14"D

INV#29440

ASSEMBLY INSTRUCTIONS

Made In China

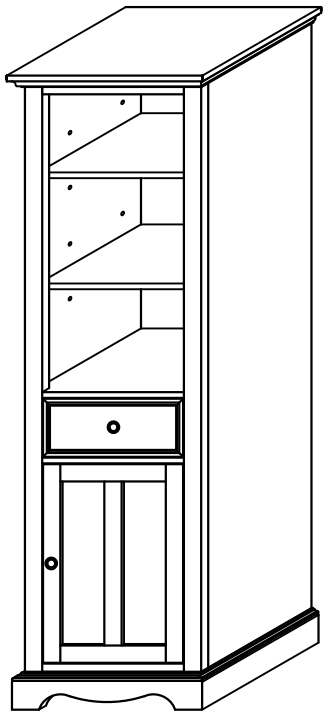

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment.Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Custormer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

STRUCTURAL DIAGRAM

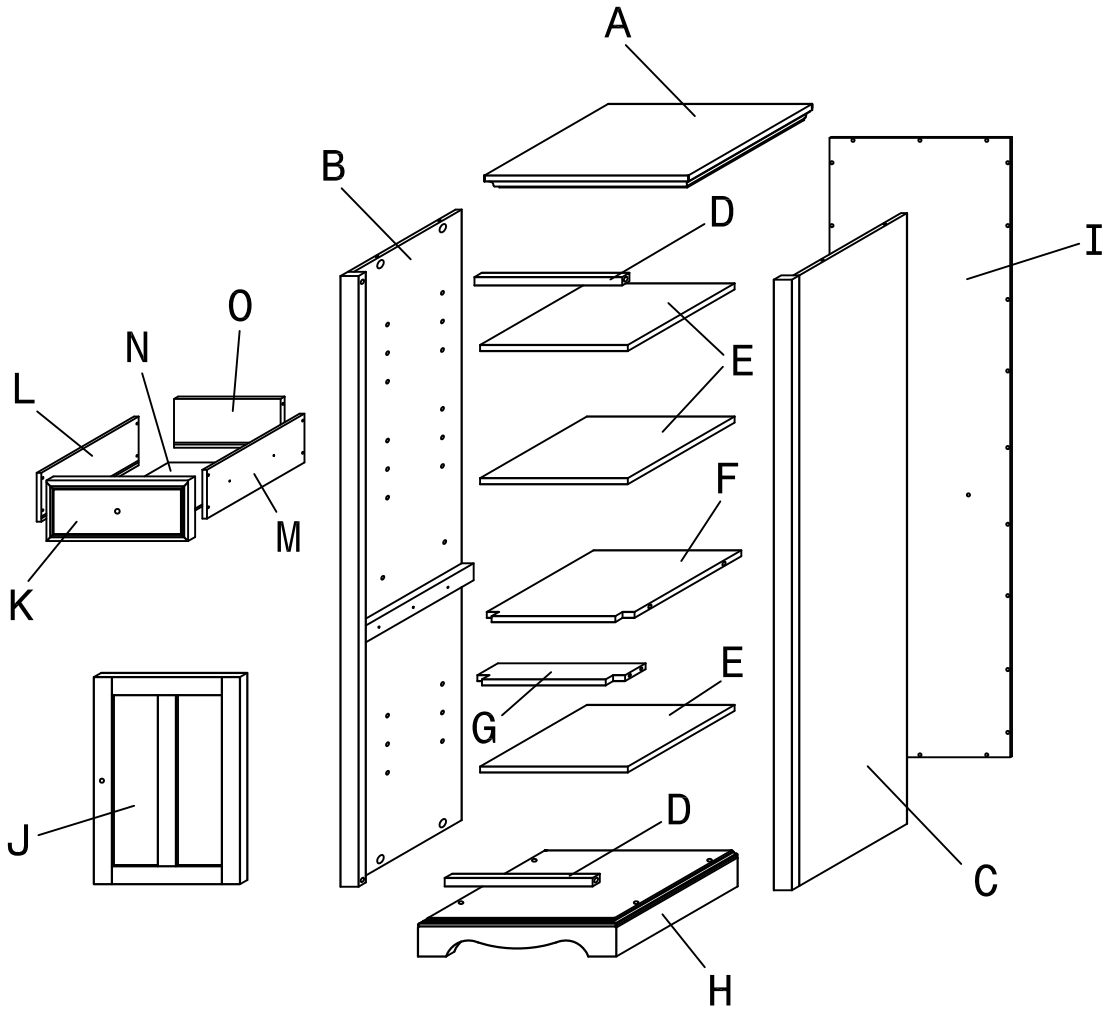

PARTS LIST

A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC	D  ADORNING PANELS-2PCS
E  SHELVES-3PCS	F  ACROSS PANEL-1PC	G  SMALL ACROSS PANEL-1PC	H  BOTTOM PANEL-1PC
I  BACK PANEL-1PC	J  DOOR-1PC	K  DRAWER PANEL FRONT-1PC	L 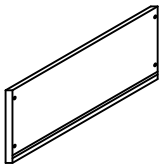 LEFT DRAWER PANEL SIDE-1PC
M 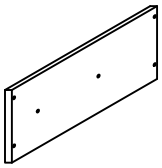 RIGHT DRAWER PANEL SIDE-1PC	N  DRAWER PANEL BOTTOM-1PC	O DRAWER PANEL BACK-1PC	P CAM-TOOL-1PC
Q 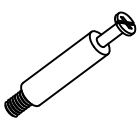 CAM-BOLTS-18PCS	R CAM-LOCKS-18PCS	S  SHELF SUPPORTS-12PCS	T  DOWELS-2PCS

U  MAGNET-1PC	V 7mm × 5/8"  SCREWS-28PCS	W  FEFMALE MAGNET-1PC	X 5mm × 1/2"  SCREW-1PC
Y  HANDLES-2PCS	Z 8mm × 5/8" SCREWS-2PCS	A1  FEET-4PCS	B1  HINGES-2PCS
C1 7mm × 5/8" SCREWS-12PCS	D1 6mm × 1/2"  SCREWS-10PCS	E1 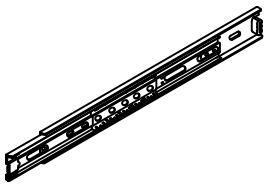 OUTER SLIDERS-2PCS	F1 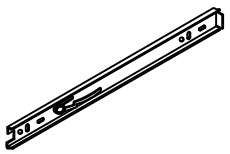 INNER SLIDES-2PCS
G1 GECKOS-4PCS	H1  HOOKS-4PCS	I1 6mm × 3/4"  SCREWS-12PCS	J1 PLASTIC BELTS-2PCS
K1 7mm × 7/8"  SCREWS-4PCS			

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

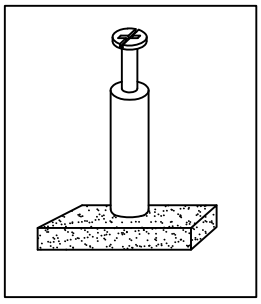

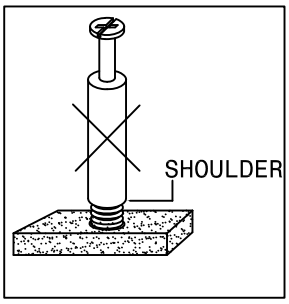

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

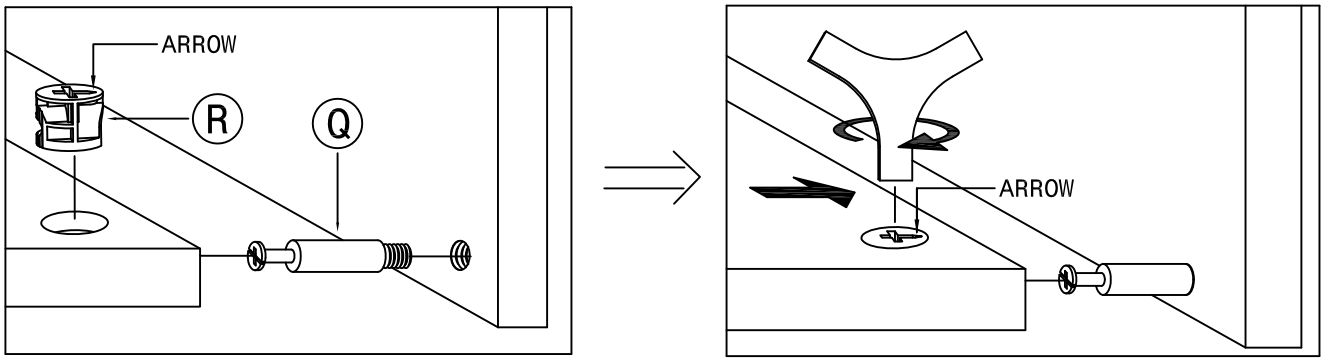

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

HOW TO SEPARATE GLIDES

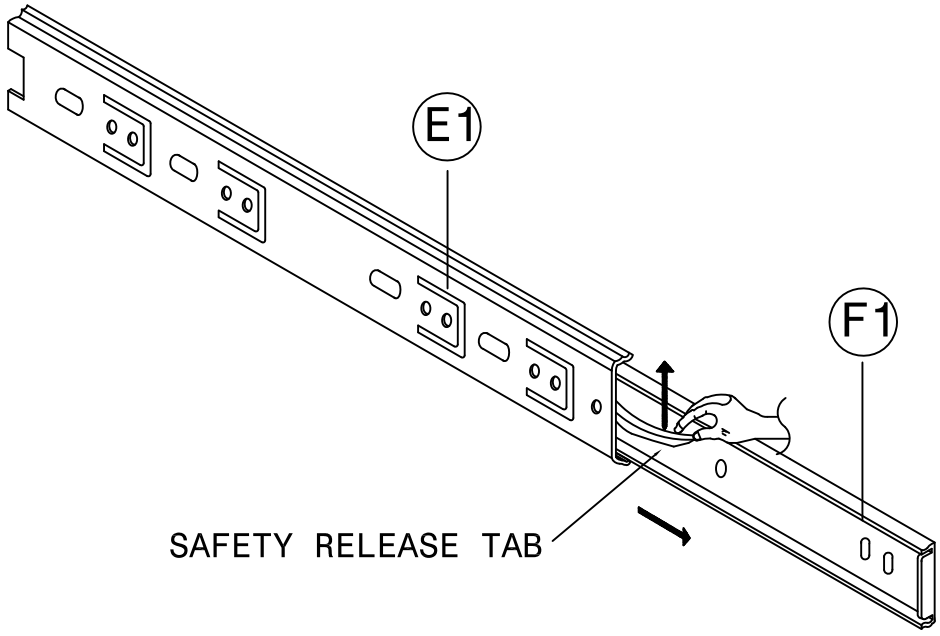

PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE

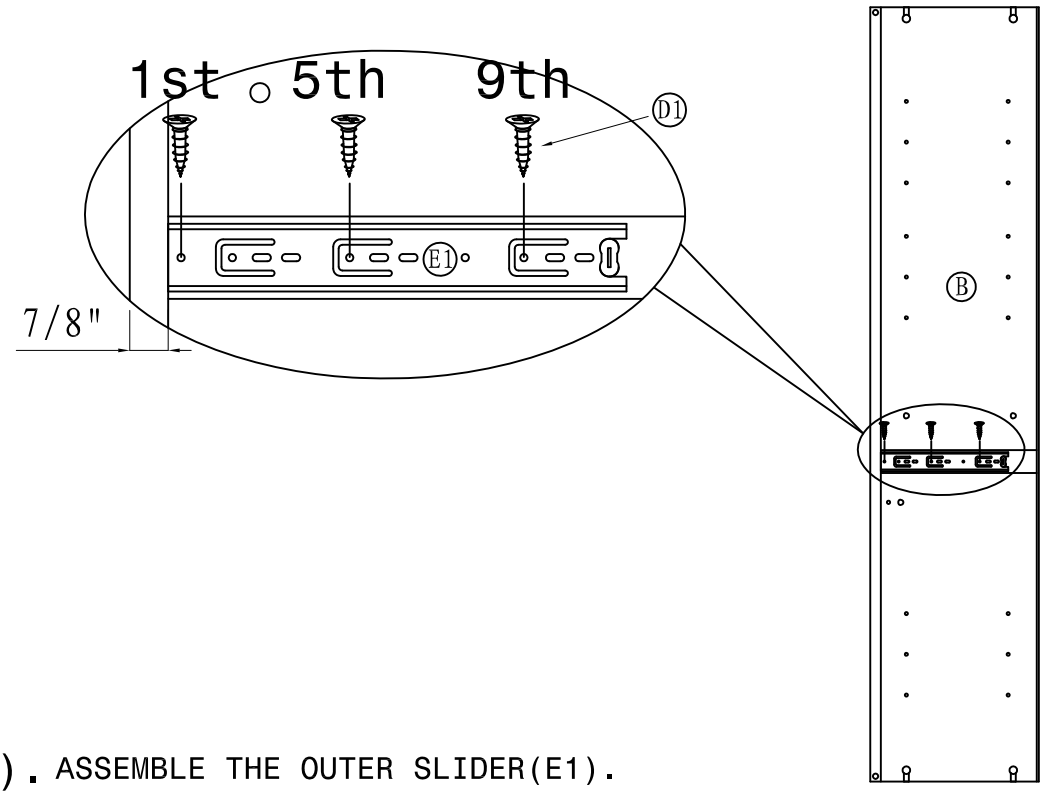

1). ASSEMBLE THE OUTER SLIDER(E1).

- ATTACH THE OUTER SLIDER(E1) TO LEFT SIDE PANEL(B) USING 3 SCREWS(D1).

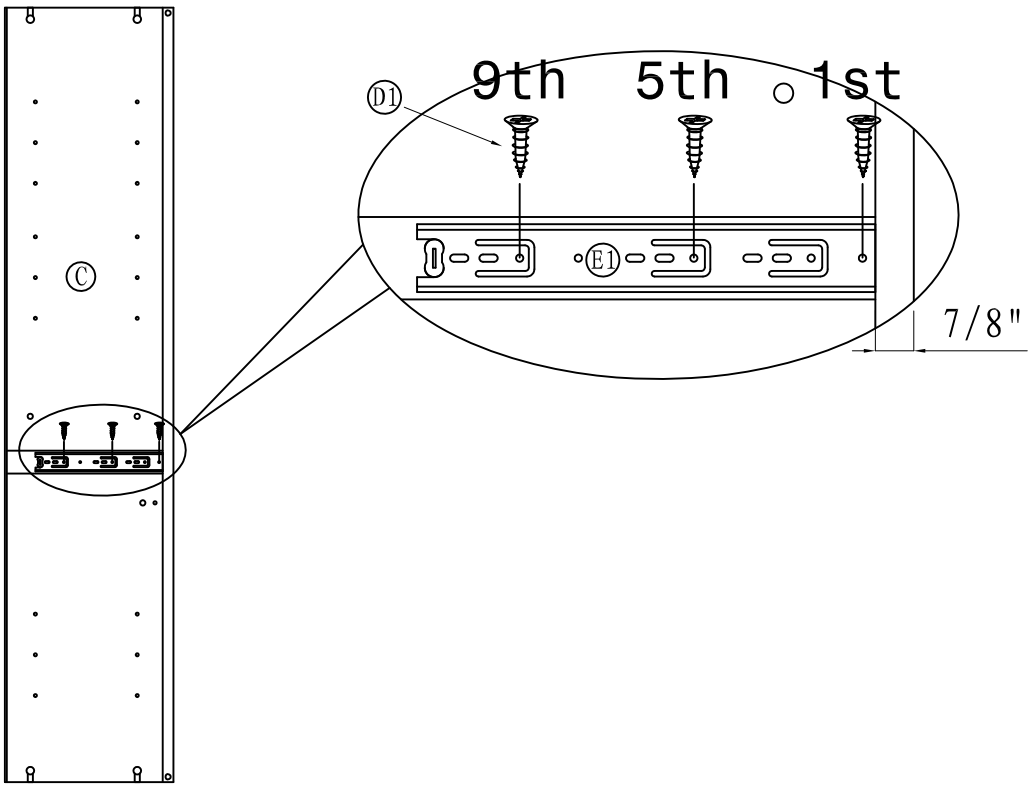

2). ASSEMBLE THE OUTER SLIDER(E1).

- ATTACH THE OUTER SLIDER(E1) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(D1).

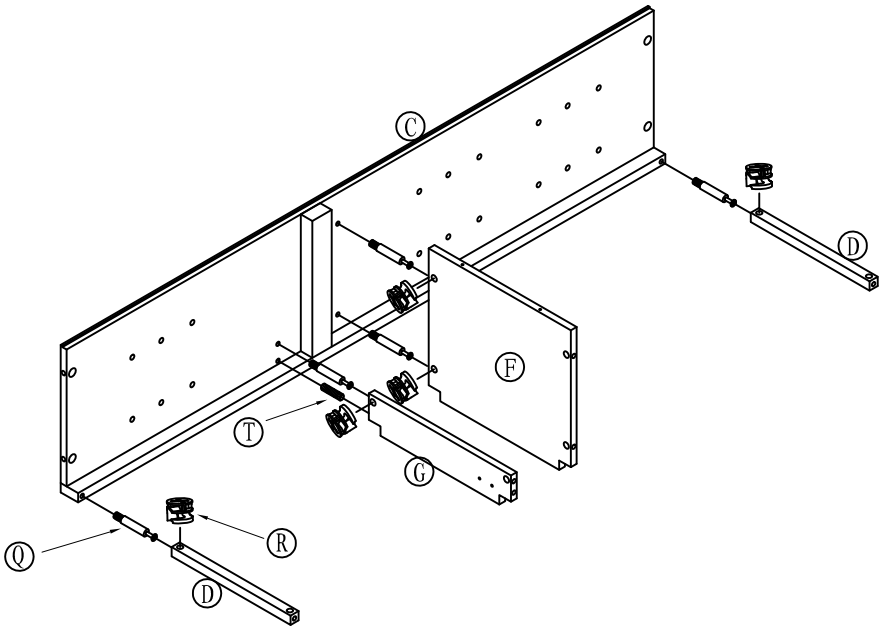

3). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 5 CAM-BOLTS(Q) AND INSERT 1 DOWEL(T) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE THE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(D/F/G) AND ATTACH USING 5 CAM-LOCKS(R).

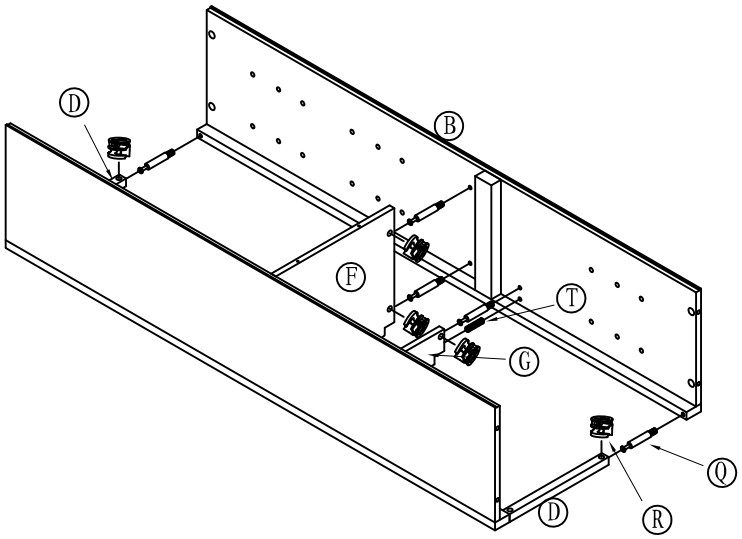

4). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 5 CAM-BOLTS(Q) AND INSERT 1 DOWEL(T) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE THE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(D/F/G) AND ATTACH USING 5 CAM-LOCKS(R).

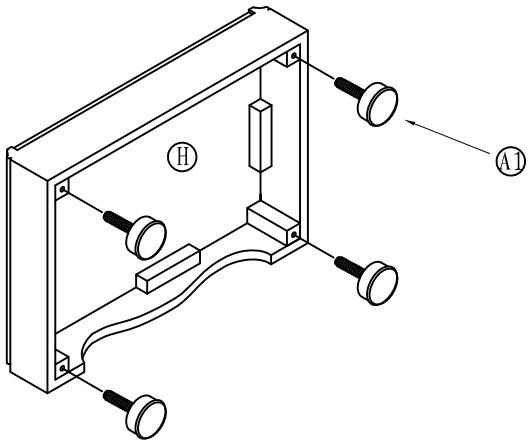

5). ASSEMBLE THE FEET(A1).

- ROTATE 4 FEET(A1) INTO THE HOLES IN THE BOTTOM PANEL(H).

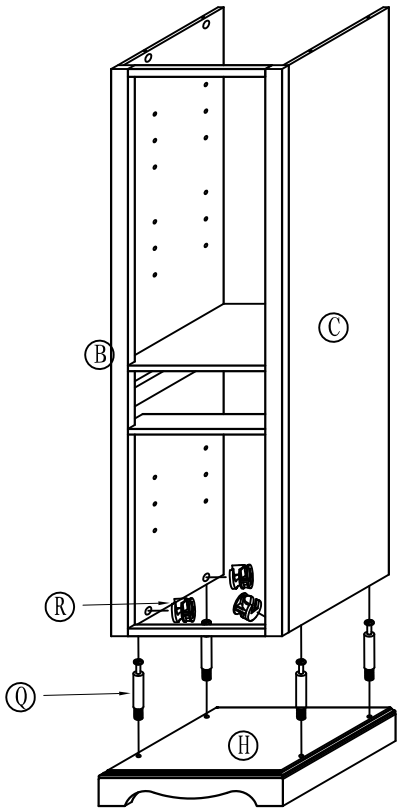

6). ASSEMBLE THE BOTTOM PANEL(H).

- ROTATE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE BOTTOM PANEL(H).
- PLACE THE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(R).

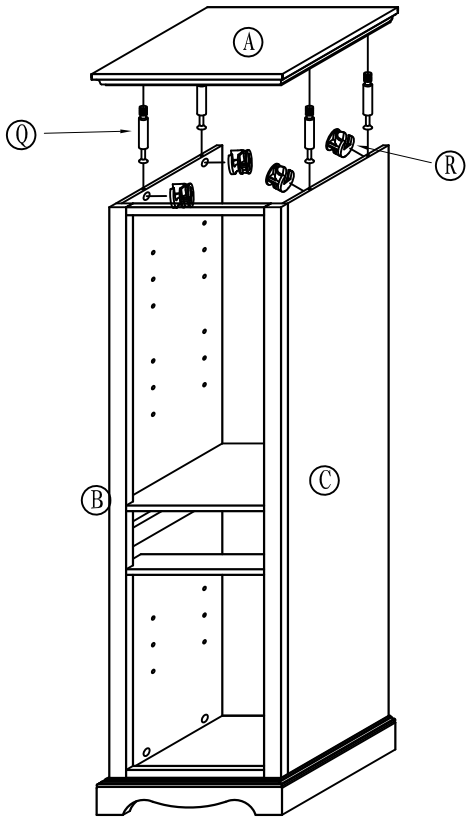

7). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE THE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(R).

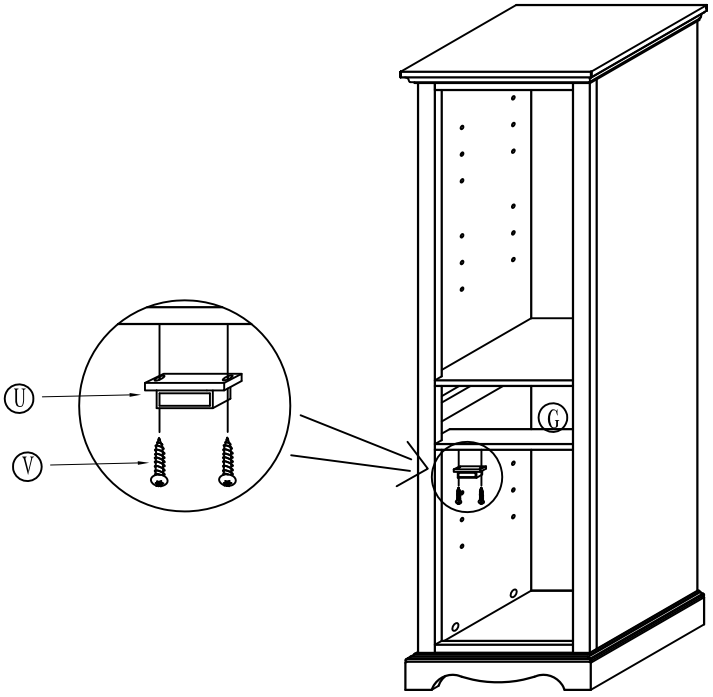

8). ASSEMBLE THE MAGNET(U).

- ATTACH THE MAGNET(U) TO SMALL ACROSS PANEL(G) USING 2 SCREWS(V).

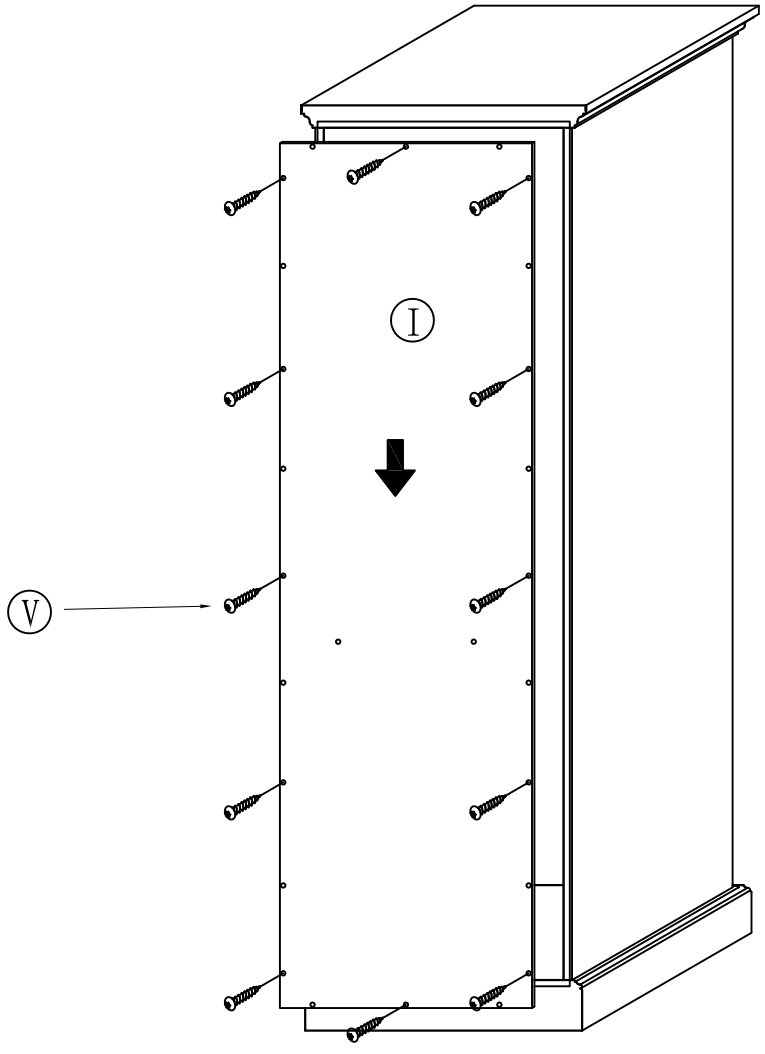

9). ASSEMBLE THE BACK PANEL(I).

- ATTACH THE BACK PANEL(I) USING 26 SCREWS(V).

Warning

The anti-tip hardware must be used as part of assembly!

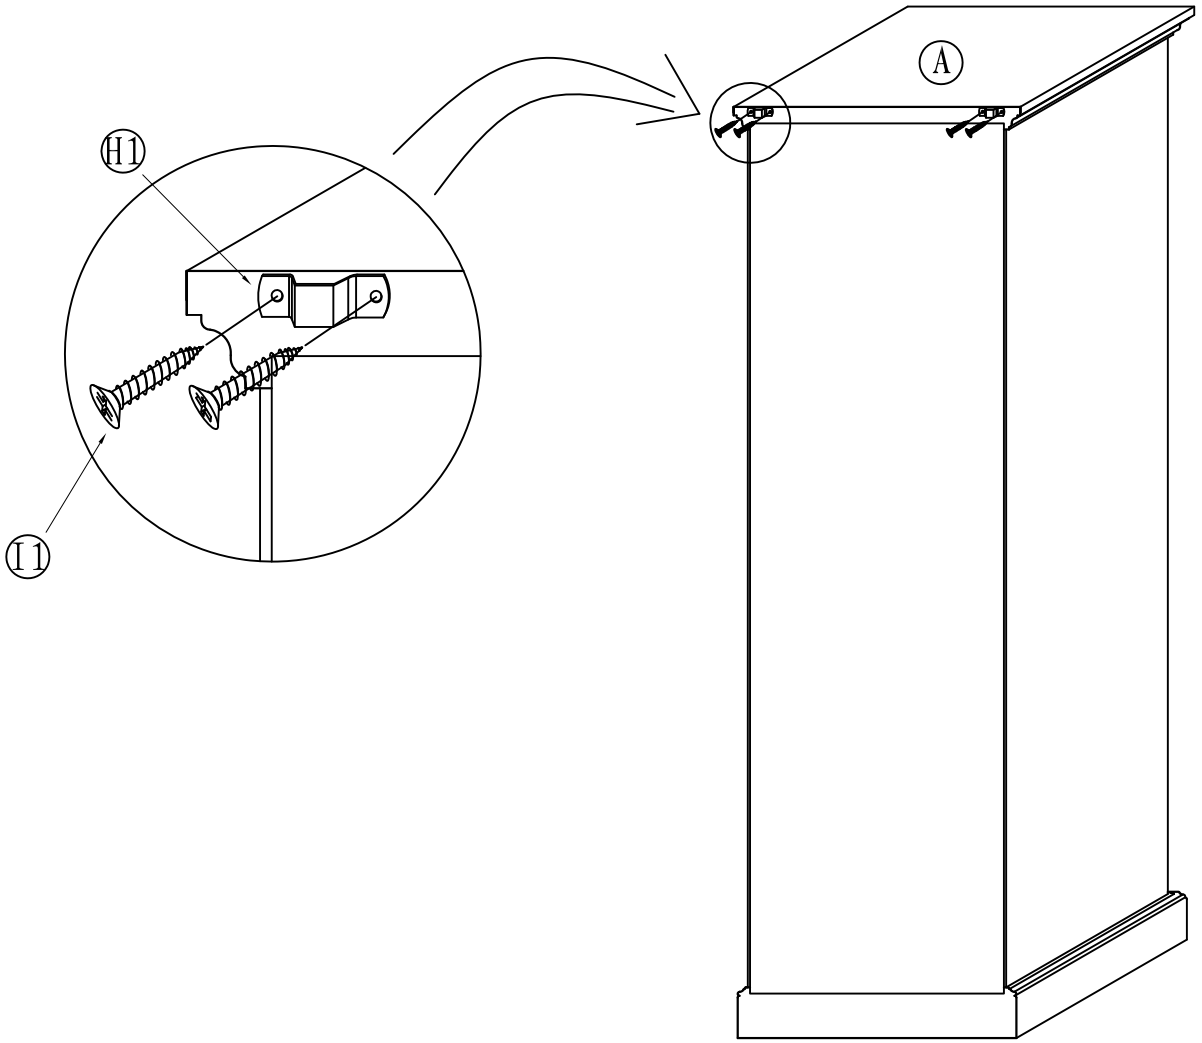

10). ASSEMBLE THE HOOKS(H1).

● ATTACH THE HOOKS(H1) TO TOP PANEL(A) USING 4 SCREWS(I1).

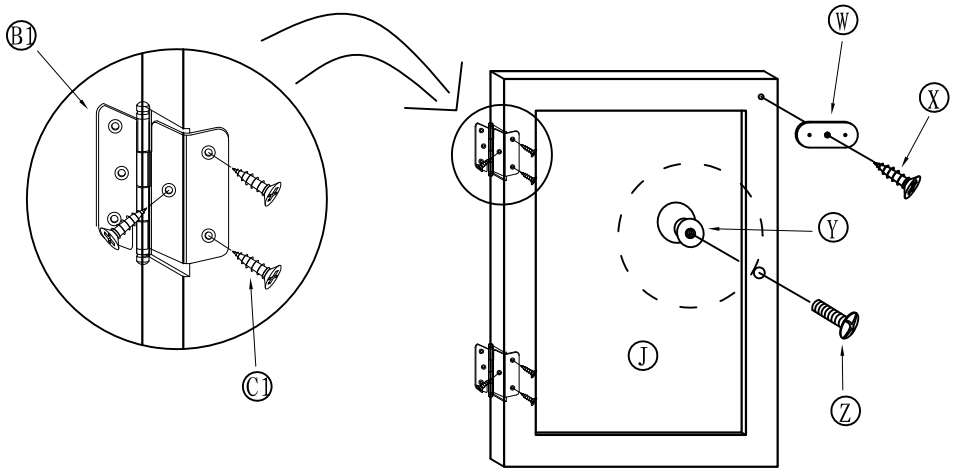

11). ASSEMBLE THE DOOR(J).

- ATTACH THE FEMALE MAGNET(W) TO DOOR(J) USING 1 SCREW(X).
- ATTACH THE HANDLE(Y) TO DOOR(J) USING 1 SCREW(Z).
- ATTACH 2 HINGES(B1) TO DOOR(J) USING 6 SCREWS(C1).

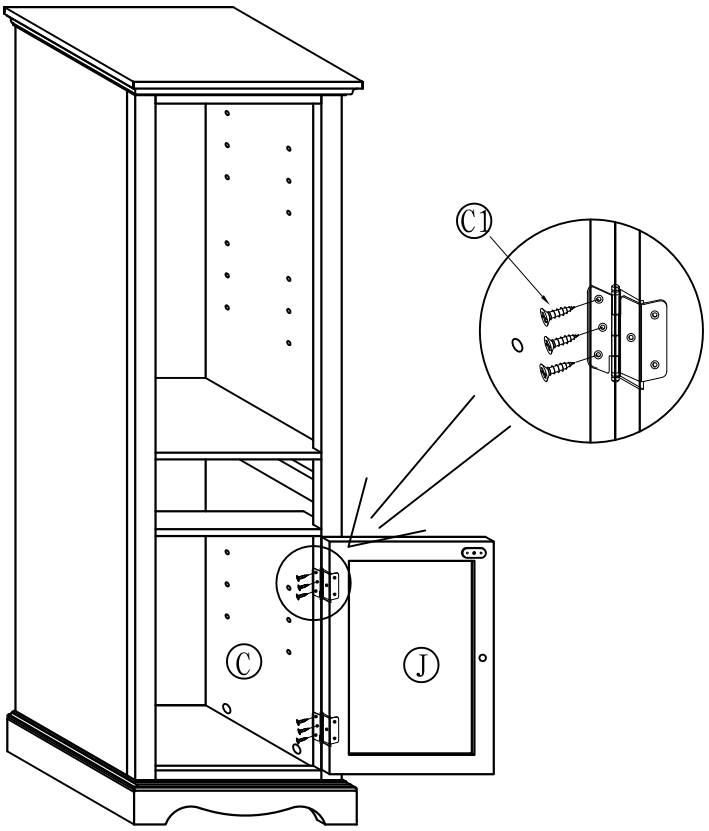

12). ASSEMBLE THE DOOR(J).

- ATTACH THE DOOR(J) TO RIGHT SIDE PANEL(C) USING 6 SCREWS(C1).

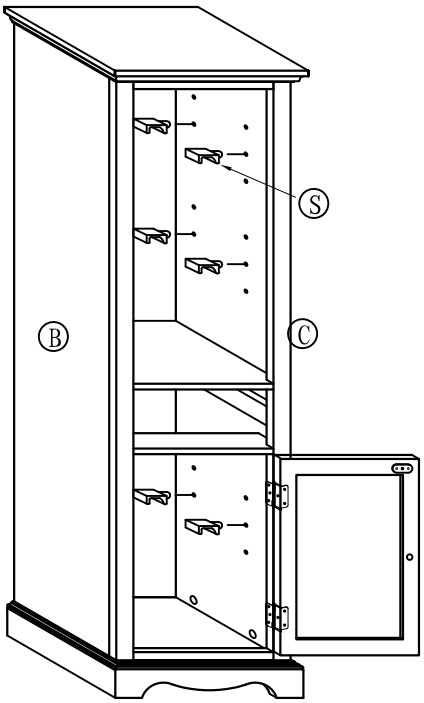

13). ASSEMBLE THE SHELF SUPPORTS(S).

- INSERT 12 SHELF SUPPORTS(S) INTO THE HOLES IN THE SIDE PANEL(B/C).

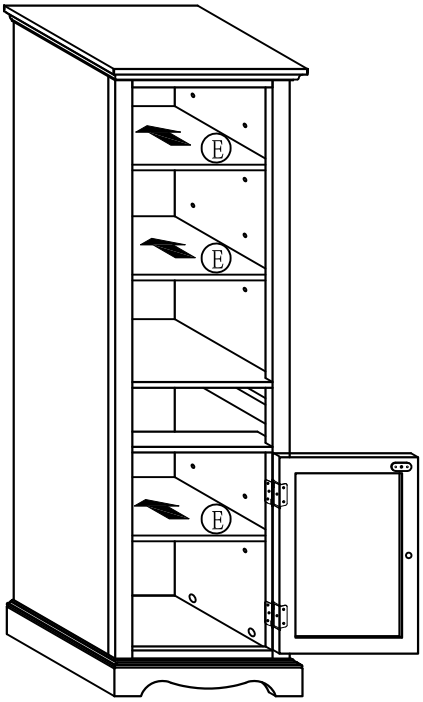

14). ASSEMBLE THE SHELVES(E).

- PUT THE SHELVES(E) ONTO THE SHELF SUPPORTS(S).

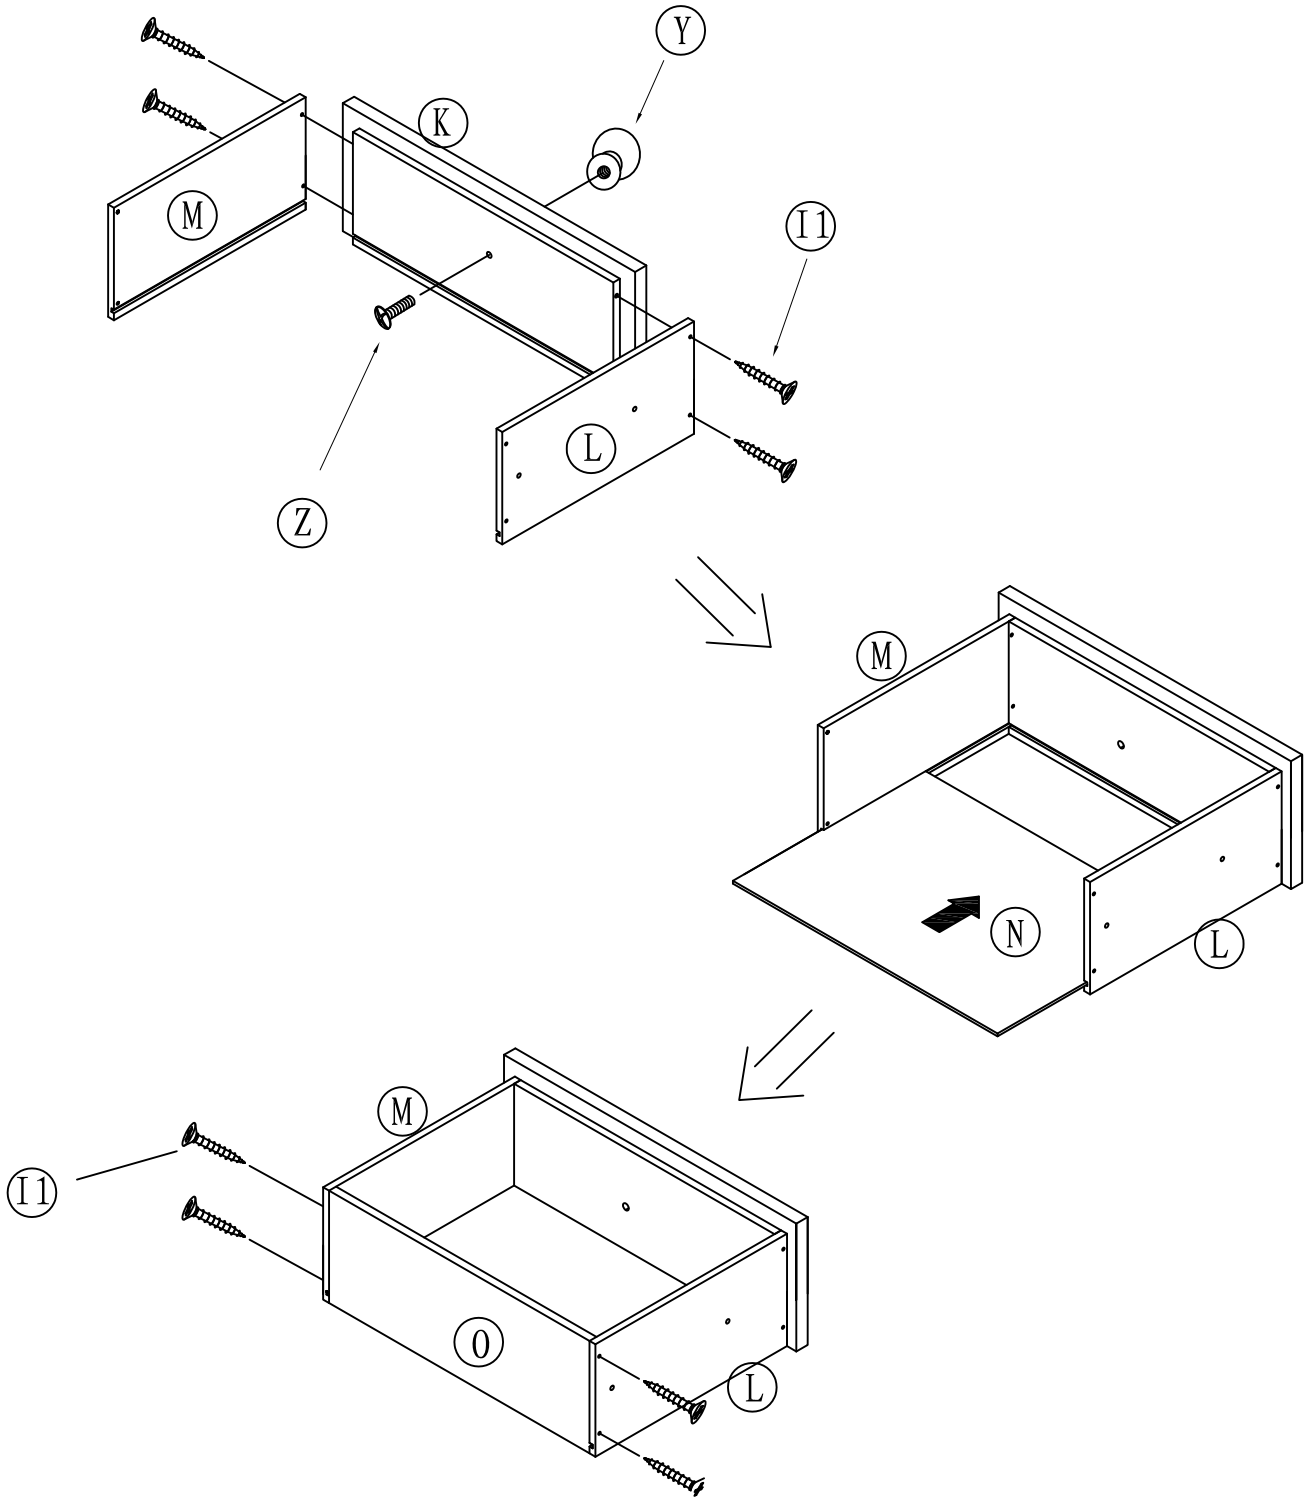

15). ASSEMBLE THE DRAWER.

- ATTACH THE DRAWER PANEL SIDE(L/M) TO DRAWER PANEL FRONT(K) USING 4 SCREWS(I1).
- ATTACH THE HANDLE(Y) TO DRAWER PANEL FRONT(K) USING 1 SCREW(Z).
- INSERT DRAWER PANEL BOTTOM(N) INTO THE SLOT IN THE DRAWER PANEL SIDE(L/M).
- ATTACH THE DRAWER PANEL BACK(O) BETWEEN LEFT DRAWER PANEL SIDE(L) AND RIGHT DRAWER PANEL SIDE(M) USING 4 SCREWS(I1).

ARROW FACES DRAWER FRONT

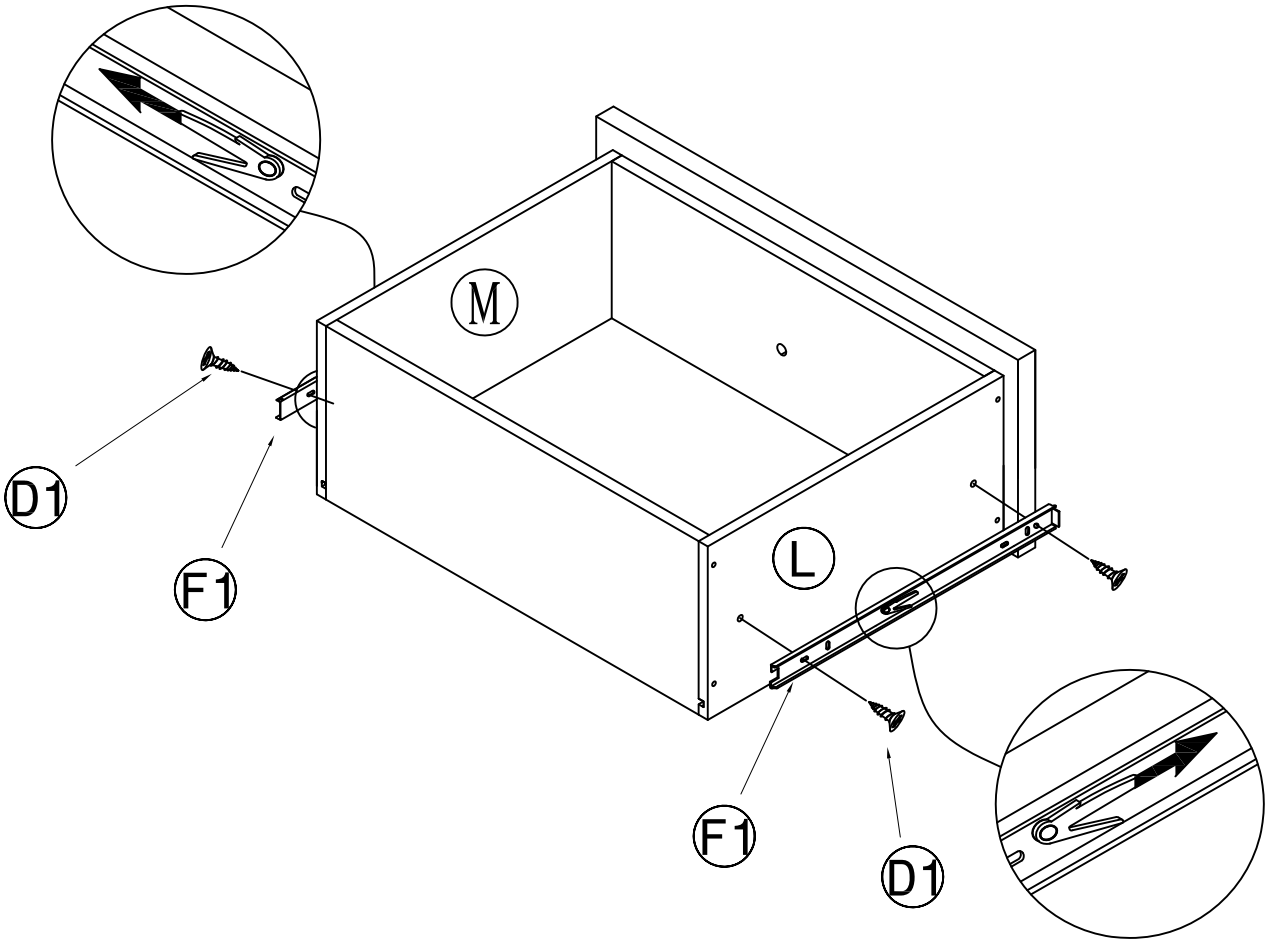

ARROW FACES DRAWER FRONT

16). ASSEMBLE THE INNER SLIDES(F1).

● ATTACH THE INNER SLIDES(F1) TO DRAWER PANEL SIDE(L/M) USING 4 SCREWS(D1).

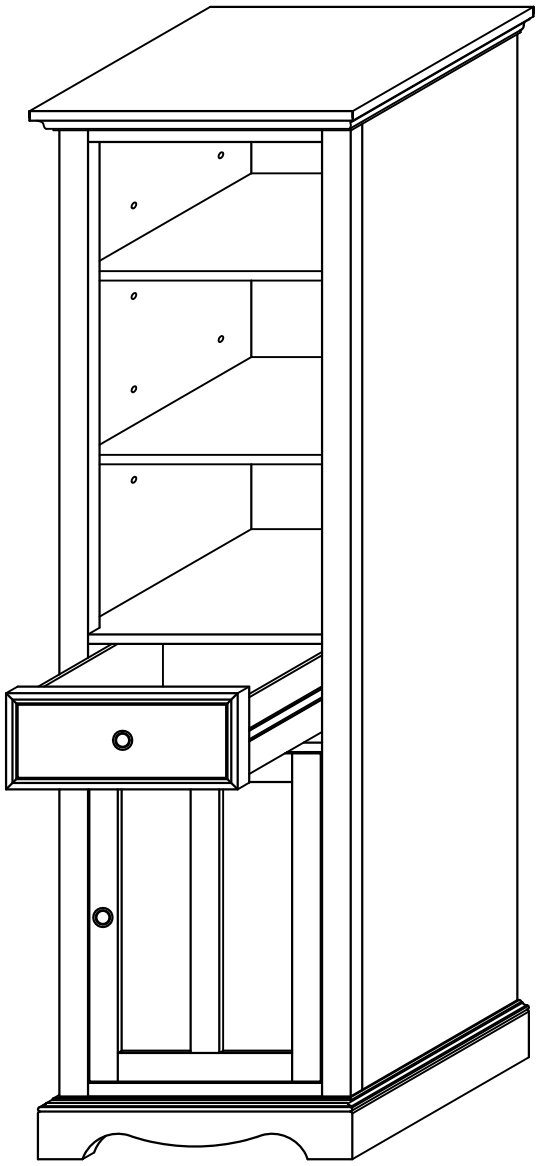

17). ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDERS.

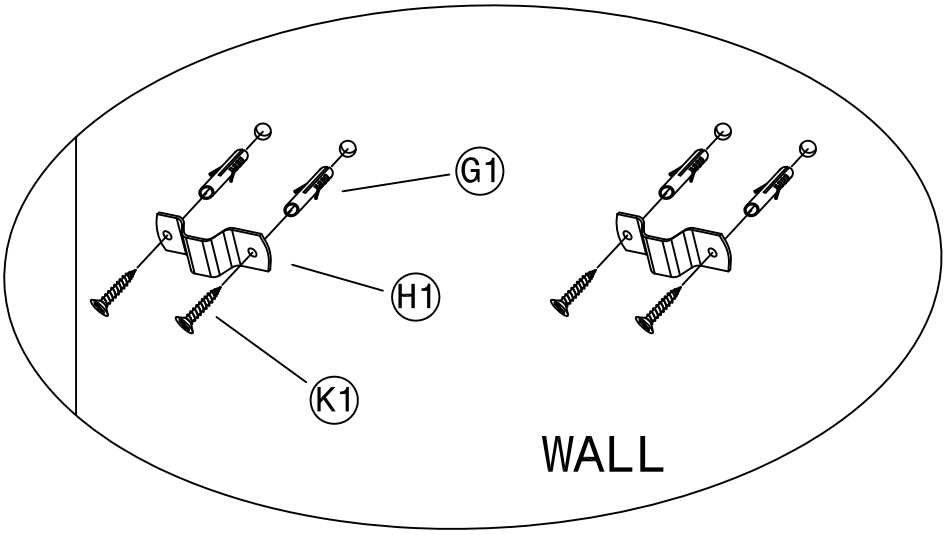

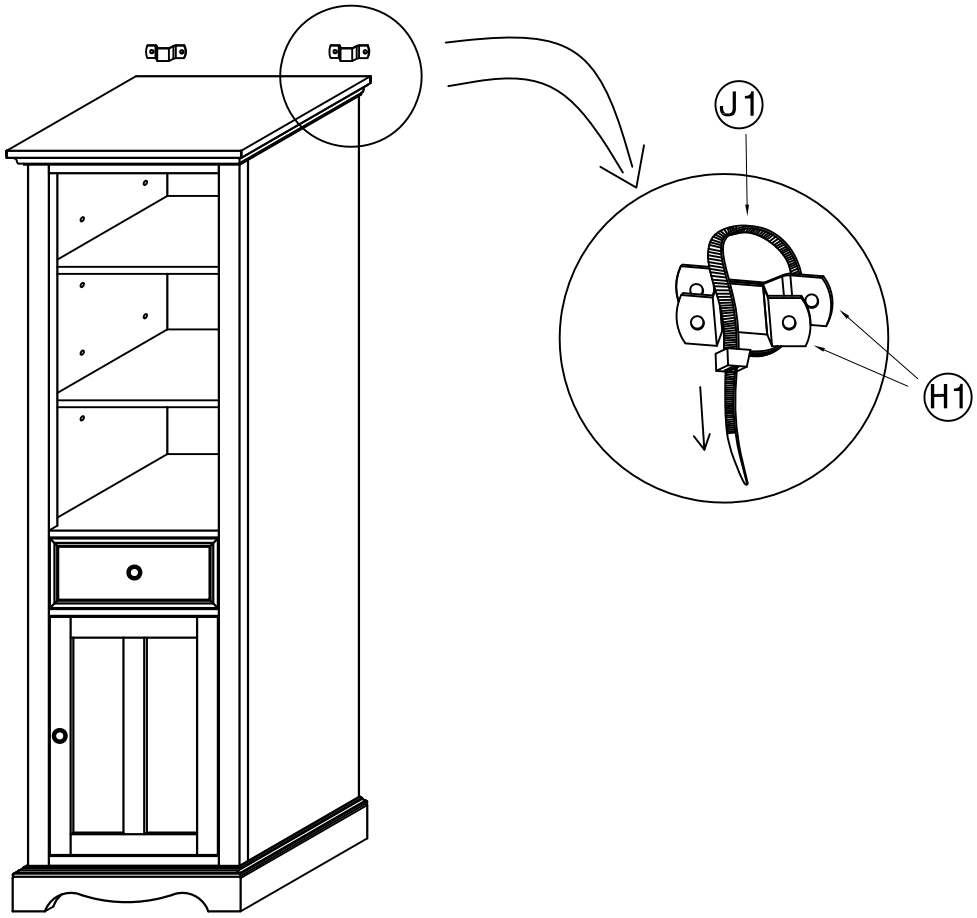

18). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 GECKOS(G1) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(K1) INTO THE GECKOS(G1).
- CONNECT THE TWO HOOKS(H1) WITH A PLASTIC BELT(J1).